

IVR Option

Table 2-13 summarizes the options provided by the IVR.

Table 2-13 IVR Options IVR Action	IVR Menu Choice	Parameter(s)	Notes
Enter IVR Menu	* * * *	None	Ignore SIT or other tones until you hear, "Linksys configuration menu. Please enter option followed by the pound key or hang-up to exit."
Exit IVR Menu	3948	None	
Check DHCP	100	None	IVR announces if DHCP is enabled or disabled.
Enable/Disable DHCP	101	Enter 1 to enable Enter 0 to disable	Requires password
Check WAN IP Address	110	None	IVR announces the current IP address of the WAN port.
Set Static IP Address	111	Enter IP address using numbers on the telephone key pad. Use the * (star) key when entering a decimal point.	DHCP must be "Disabled," otherwise you hear, "Invalid Option," if you try to set this value. Requires password
Check Network Mask	120	None	IVR announces the current network mask of Linksys ATA.
Set Network Mask	121	Enter value using numbers on the telephone key pad. Use the * (star) key when entering a decimal point.	DHCP must be "Disabled," otherwise you hear, "Invalid Option," if you try to set this value. Requires password
Check Static Gateway IP Address	130	None	IVR announces the current gateway IP address of the Linksys ATA.
Set Static Gateway IP Address	131	Enter IP address using numbers on the telephone key pad. Use the * (star) key when entering a decimal point.	DHCP must be "Disable," otherwise you hear, "Invalid Option," if you try to set this value. Requires password
Check MAC Address	140	None	IVR announces the MAC address of Linksys ATA in hex string format.
Check Firmware Version	150	None	IVR announces the version of the firmware running on the Linksys ATA.
Check Primary DNS Server Setting	160	None	IVR announces the current setting in the <Primary DNS> parameter.

Set Primary DNS Server	161	Enter IP address using numbers on the telephone key pad. Use the * (star) key when entering a decimal point.	Requires password
Check administration web server port	170	None	IVR announces the port that the web server is listening on. (Default is 80)
Check LAN IP Address	210	None	IVR announces the current IP address of the LAN port.
Check PBX multicast address	180	None	IVR announces the current value.
Set PBX multicast address	181	Enter IP address and port. Use * key for entering a dot. For example, 224.168.168.169:8089 is 224*168*168*169*8089.	Enter a * between the IP address and the Port fields. Requires Password
Enable/Disable administration web server	7932	Enter 1 to enable Enter 0 to disable	Requires password
Manual Reboot of Unit	732668	None	After you hear “Option Successful,” hang up. Unit reboots automatically.
User Factory Reset of Unit	877778	Enter 1 to confirm Enter *(star) to cancel operation	Linksys ATA prompts for confirmation. After confirming, you hear “Option Successful.” Hang up. Unit reboots and all “User Changeable” configuration parameters are reset to factory default values.
<p>WARNING:</p> <p>ALL “User-Changeable” NON-DEFAULT SETTINGS WILL BE LOST!</p> <p>This might include network and service provider data.</p>			
<p>Factory Reset of Unit</p> <p>WARNING:</p> <p>ALL NON-DEFAULT SETTINGS WILL BE LOST!</p> <p>This includes network and service provider data.</p>	73738 (RESET)	Enter 1 to confirm Enter *(star) to cancel operation	Linksys ATA prompts for confirmation. After confirming, you hear “Option Successful.” Hang up. Unit reboots and all configuration parameters are reset to factory default values.